

Hereby in short a guidance with respect to the installation; maintenance and use of the watertank during **wintertime**.

Installation instructions during the wintertime:

Assembly conditions:

The tank can be installed at:

- Maximum wind force < 5 Bft, to be judged by the responsible assembler on site.
- Temperature minimum +5°C for all BUWAliners.

Recommendations during wintertime:

- **IMPORTANT!** Do not withdraw any water from the tank at temperatures $\leq 0^{\circ}\text{C}$; especially **not** when ice is present on the water surface in the tank.
- Loading, cleaning, moving and walking upon the liner must be avoided at temperatures $\leq 0^{\circ}\text{C}$.
- Keep the tank filled as much as possible; at least half level; water in tank stabilizes the tank with respect to (strong) winds and minimizes the risk of flapping damage of the liner.
- Pipes etc. should be frost proof.
- Tankcovers must be free from snow, the cover must be inspected regularly after strong winds, storm or snowstorm. check the walls of the tank for damage.
- For floating sheets: check if the tubes are without water so they cannot freeze.
- Any damage noticed to tank, liner or anti-algae must be repaired directly.